BANDAI®MD

bandai.com

6+ #37480
#37493-37498

Tamagotchi friends™

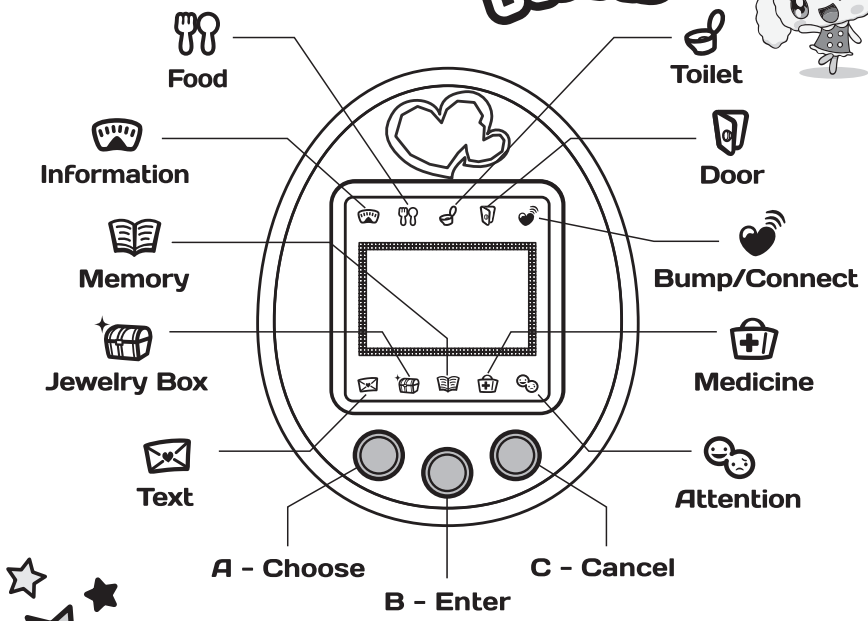

Dream Town Digital Friend™MC

WWW.TAMAGOTCHIFRIENDS.COM

Hatch, raise and take care of Tamagotchi Friends characters! They can grow from baby to adult, and even get married! This fun, interactive virtual friend will grow and develop differently depending on how well you take care of it. Once your Tamagotchi egg has hatched, feed it food when it is hungry, give it medicine when it is sick, potty train it, bathe it and play games to earn Gotchi points. And "bump" with other Tamagotchi Friends' devices to send text messages, send gifts and even have your virtual friend go on playdates! The more you "bump" the more points and rewards you will earn and the higher your best friend meter will go. Then use your points to buy meals, snacks and jewelry in the shop or share items with your friends by giving and receiving gifts.

HOW TO GET STARTED

ADULT ASSEMBLY REQUIRED

1. Using a screwdriver, remove the bottom of the device; place 2 -1.5v AAA batteries into the device. Replace back and insert screw. Batteries not included. See 'How to Replace Batteries' under 'Tama Tips.'
2. Press reset button on back. See 'Tama Tips.'
3. Set today's month, date and time.
4. Set your birthday month/date. Your character might celebrate your birthday.
5. Enter your name (up to 8 letters) by using button (A) to select and button (B) to confirm. Press (A) while pressing (C) to go back a letter.
6. After returning to the main screen, you will find 3 eggs. Choose one to hatch by pressing button (A) and then button (B) to select. A character will be born in approximately one minute.

To check time:

Without selecting an icon, press button (B) to see time display.

HOW TO MAKE YOUR CHARACTER GROW

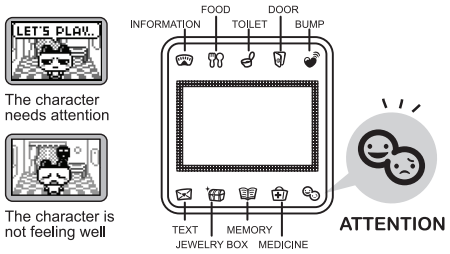

When your character needs something, it calls you with a beep and the Attention icon is highlighted. Check the information icon to see how hungry or happy your character is so you can play with it or feed it.

THE GROWTH PROCESS



HOW TO TAKE CARE OF YOUR CHARACTER

Information

Press button (A) to choose “INFORMATION” icon and then button (B) to select it.

▶ **AGE / WEIGHT / GENERATION**

Every day your character lives, it becomes 1 year older. Keep it healthy and don’t allow its weight to get too high.

▶ **CHARACTER NAME / GOTCHI POINTS**

You can check character name here. You can also view how many Gotchi points you’ve earned and you can use these Gotchi points to shop. You can check your character’s skill that he/she gets by taking the classes/playing the games at DREAM SCHOOL. That will affect his/her growth.

DREAM SCHOOL CLASSES

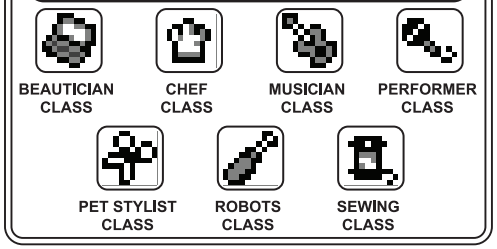

▶ **LEVEL OF HUNGER / HAPPINESS**

The number of hearts you have indicates your character’s Hunger and Happiness (the more hearts, the better!)

▶ **BFF POINT**

You earn BFF points every time you bump with your friends’ devices. New games will unlock once the heart is half filled with BFF points.

Food

Press button (A) to choose “FOOD” icon and then button (B) to select it. Choose from a variety of meals or snacks. Use Gotchi points to buy additional food items at the shop.

▶ **BREAD AND MILK**

Bread and milk will always be available for your Tamagotchi to eat and drink, but you should purchase different food items as your Tamagotchi gets older.



Toilet

When your character makes a mess, press button (A) to choose the “TOILET” icon and use button (B) to clean up.

Door

Press button (A) to choose “DOOR” icon and then button (B) to select it. Press button (A) to choose the destination “DREAM SCHOOL” “MUSIC CAFÉ” “TAMAMORI SHOP” “GAME” “YUMEX TV” “TAMA CIRCUS” “PC”. “DATE PLACE” will appear once your character grows up enough to get married.

DREAM SCHOOL

▶ **PERFORMER CLASS**

Press the buttons to choose the music line when the vertical line reaches the music note to make your character perform well.
(A) upper (B) middle (C) lower

▶ **BEAUTICIAN CLASS**

Collect the pieces by pressing button (B) and complete the picture as shown on the left.



▶ **MUSICIAN CLASS**

Choose the music notes before they reach the bottom line. To scroll the music notes:
(A) to left (C) to right (B) select

▶ **ROBOT CLASS**

Drive your spaceship. Don’t crash or game over!
(A) go left (B) speed up (C) go right

▶ **SEWING CLASS**

Choose the same item from the bottom as shown in the window.
(A) left (B) middle (C) right

▶ **CHEF CLASS**

Receive the vegetables with correct boxes. To scroll boxes:
(A) to left (C) to right

▶ **PET STYLIST CLASS**

Feed Tama Pets!
(A) turn to left/jump (B) feed
(C) turn to right/jump

MUSIC CAFÉ

After choosing the “DOOR” icon press button (A) one time to choose “MUSIC CAFÉ” and then button (B) to select it. You need to choose “FOR HERE” or “TO GO”, then what type of items you want. You can choose items on the screen by using button (A) to scroll and button (B) to select. Different items will be available from time to time. Foods will be stored in “FOOD” icon.

TAMAMORI SHOP

After choosing the “DOOR” icon, press button (A) two times to choose “TAMAMORI SHOP” and then press (B) to select it to buy jewelry. You need to choose what type of item you want. You can choose items on the screen by using button (A) to scroll and button (B) to select. The jewelry will be stored under “JEWELRY BOX” icon.

GAME

▶ **TENNIS**
Keep a rally going!
(A) or (B) move your character
(C) swing

▶ **BALLOON**
Jump as high as possible to collect as many balloons as you can.
(B) Jump to collect balloon
(A) at left (C) at right

▶ **FLOWER COUNT**
The car will take and drop some flowers. Count the number of flowers in the car at the end.
(A) scroll (B) select
(C) scroll in reverse

▶ **CAKE CATCH**
Pick the correct cake from the bottom cakes scrolling to left.
(A) speed up (B) lower the crane

YUMEX TV

After choosing the “DOOR” icon, press button (A) four times to choose “YUMEX TV” and then button (B) to select it to visit and meet D2!

TAMA CIRCUS

After choosing the “DOOR” icon, press button (A) five times to choose “TAMA CIRCUS” and then button (B) to select it to visit and meet other characters.

PC

After choosing the “DOOR” icon, press button (A) three times to choose “PC” and then button (B) to select it to get a special code for the Tamagotchi Friends website (www.TamagotchiFriends.com)

Enter Dream Town on the website and visit one of the Fortune Teller tents to enter a LOGIN number to receive a special surprise.

This is a 14-digit LOGIN number available on screen. Note: To avoid losing the saved data in your toy, do not press any button while viewing your 14-digit password. **Stay on this screen until you receive your 8-digit LOG-OUT number from the Tamagotchi Friends website.**

Once you have your LOG-OUT number, press (B) to bypass your LOG IN number and to enter the new LOG-OUT number. Use (A) to scroll through the digits and (B) to select. You may use (C) to erase.

DATE PLACE

Once your Tamagotchi grows up and it’s time to get married, you can go to "DATE PLACE". After choosing the "DOOR" icon, press button (A) four times to choose and then button (B) to select it. You can choose who to marry by pressing button (A) and then select by pressing button (B).

Bump

Connect with other Digital Friend device using the bump. Connection is not possible with older Tamagotchi device versions (e.g. V3, V4, V4.5).

It’s possible only with the Tamagotchi Friends series.

Sometimes your character will marry your friends’ character if you connect with other Digital Friend devices using the bump feature.

CONNECT

Press button (A) to choose “BUMP” icon and then button (B) to select it.

1. To connect to another device, choose “EXCHANGE” “BFF BUMP” “VISIT BUMP” “SPECIAL” or “TAG READ” by pressing button (A) and then button (B) to select each menu.

2. Position both toys together with their back facing each other:

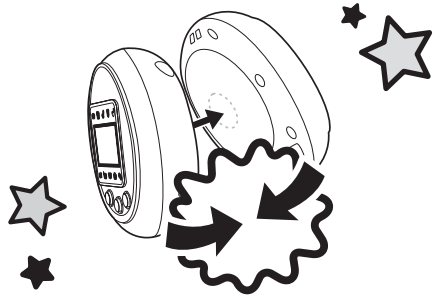

EXCHANGE

You can give/receive food or jewelry to/from your friends. Choose “GIVE” or “RECEIVE”. If you select “GIVE”, choose the item you want to give by pressing button (A) to go through your items and press button (B) to select. If you select “GIVE”, your friend has to select “RECEIVE.”

BFF BUMP

Both you and your friend get jewelry (randomly). If the BFF level between the both of you is high, Jackpot sometimes occurs. If your friend’s device is “Tamagotchi Friends Dream Town Digital Friend”, choose “TAMAGOTCHI V9” by pressing button (B). Or if your friend’s device isn’t, select “OTHERS” by pressing button (A) and choose it by pressing button (B).

Choose a side of the heart by pressing button (A) and your friend has to choose the other side of the heart. Press button (B) to select side.

VISIT BUMP

You can visit/invite your friends’ Tamagotchi for a playdate press button (A) to choose “VISIT” or “HOST”, then button (B) to select it. If you select “VISIT”, your friend has to select “HOST”.

SPECIAL

You can bump with Special Retailer KIOSK and get jewelry including exclusive ones.

TAG READ

Feature coming soon.

Text

You can write and exchange text messages with your friends via bump connection. You need to bump with your friend before you send text messages. Press button (A) to choose “TEXT” icon and then button (B) to select.

WRITE

Press Button (B) to select “WRITE”. Press (A) to choose a friend and press button (B) to select. You can write the text message with a maximum of 24 letters. Press (A) button to select and button (B) to confirm. Press (A) while pressing (C) to go back a letter. After finishing, you can choose “SAVE” or “SEND”. If you choose “SAVE”, the message will be saved in “DRAFT” box. Otherwise, you choose “SEND”, and bump with your friend to send it.

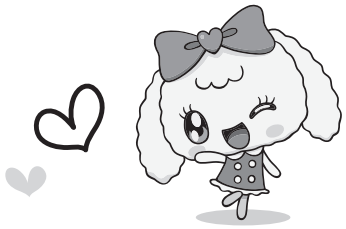

▶ RECEIVE

When you want to receive a message from your friend, you need to choose “RECEIVE” by pressing (A) and (B) and then bump with your friend.

▶ DRAFT

The message you saved will be in the “DRAFT” box. You can edit the message and send it from here. You can save only one message here. Press (A) to choose “DRAFT” and the button (B) to select it.

▶ INBOX

The messages you received from your friend will be saved in “INBOX”. You can save up to 5 messages. If you receive a 6th message, the first one will be deleted automatically. Press (A) to choose “INBOX” and then button (B) to view text messages you’ve received. By pressing button (A) this allows you to go through the text messages. If you press button (B) on the text message, you can delete it.

You can send/receive messages even if there are no “Bump Hearts”

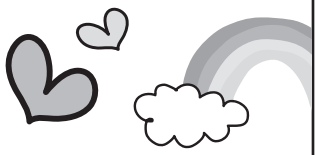

Jewelry Box

The Jewelry Box will keep and store Jewelry you get by buying at the shop, bumping and nurturing your Tamagotchi.

Press button (A) to choose “JEWERLY BOX” icon, and then button (B) to select “JEWELRY”. You can check the number of each Jewelry you have. If you give your Jewelry to friends via bumping, the number will decrease. It contains 4 catagories; CROWN, NECKLACE, BRACELET, RING.

If you get “YUMEKIRA BAG” at TAMA CIRCUS, it will be stored under “SPECIAL.”

Memory

Use button (A) to select the “MEMORY” icon and button (B) to view your list of friends and memory.

FRIENDS

Use button (B) to select “FRIENDS”. Press button (A) to choose a friend, than press (B) to check your level of friendship. Your BFF level improves with the more connections you make with that friend. When your BFF gets really high, characters can get married.

MEMORY

View your character heritage press button (A) to choose and then button (B) to select “MEMORY” to view your previous characters that are no longer under your care.

Medicine

If your character is not feeling well press (A) to choose “MEDICINE” icon. Press button (B) to cure. You might have to press button (B) twice to make sure your Tamagotchi is all better.

WHEN YOUR CHARACTER HAS A BABY

After marrying, your character will have a baby. They will stay together awhile, but the parents will return to Tamagotchi Planet.

TAMA Tips

▶ IF YOUR TAMAGOTCHI LEAVES...

If you don't take proper care of your character, sometimes they can get upset and return to their home on Tamagotchi Planet. To start over, press and hold button (A) and (C) together until a new egg appears. It will hatch after a few minutes.

▶ RESET OPTION



When to Reset? Reset for the following:

- The first time you activate your Tamagotchi.
- When the image/screen freezes or does not move after several minutes.
- When you change the battery, after pressing the RESET button, choose either DOWNLOAD or RESET. If you select RESET, the device will start over and your memory will be erased (Gotchi points, items, awards, friends, etc.). If you select Download, you will resume from your last play.

▶ HOW TO SET UP TIME

To set up time, press button (B) to view the current time. Press and hold buttons (A) and (C) together until the date begins to flash. Use button (A) to scroll and button (B) to choose/set.

NOTE: You can check your birthday while you are setting the time but you cannot change it.

▶ SOUND ON/OFF

Press and hold buttons (A) and (C) together. Select sound ON or OFF.

▶ HOW TO ADJUST CONTRAST

To change contrast, press button (B), and then buttons (B) and (C) together to view the contrast level. Select contrast level by pressing button (A) or (B) to decrease or increase contrast level, respectively. Press (C) to select level.

▶ PAUSE MODE

Press and hold button (A), then press button (B). "PAUSE" will appear on screen above your Tamagotchi character. While in PAUSE mode, the clock continues to run, but character's growth stops until you take it out of pause mode.

To take the device out of pause mode, press and hold button (A), then press button (B). "PAUSE" will disappear from the screen and your character will begin to move again.

▶ HOW TO REPLACE BATTERIES

ADULT ASSEMBLY REQUIRED

Replace batteries when you see this image on screen:

If you replace batteries, your data will be saved. You can DOWNLOAD your data and resume from your last play.

Requires 2 - 1.5v AAA batteries. Using a small screwdriver, turn the screw counterclockwise to loosen. Remove back as shown and remove old batteries. Insert new batteries as shown.

NOTE: Make sure you use new batteries.

NOTE: If you turn off sound, this may increase your battery life.

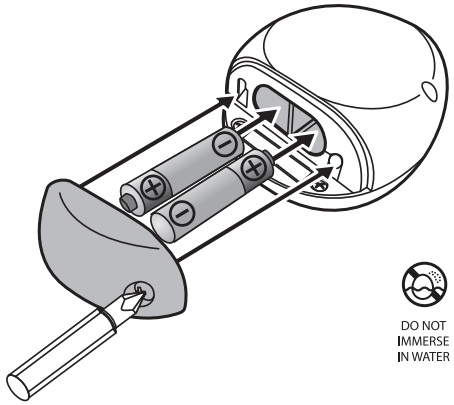

DO NOT IMMERSE IN WATER

⚠ CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) hit anyone with toy, 2) poke anyone with toy, 3) swing toy at anyone, 4) step on toy.

⚠ WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

⚠ **CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 2 - 1.5v AAA batteries. Batteries not included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. TM & © 2015 Bandai. TAMAGOTCHI and TAMAGOTCHI FRIENDS and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © BANDAI,WiZ © B,W/T,T. Bandai logo: ® and © 2015 Bandai. All Rights Reserved.